

AP25AFS Air Filter



Before running for the first time, you will need to calibrate the active flow sensor once your AP25AFS Air Filter is installed in its final position.

- The machine cannot be calibrated if the fault alarm is active - to stop this hold down the on button to reset the machine.
- Plug the machine into the wall but do not turn on the socket.
- Hold down the off button **red** circle.
- Turn on the socket on the wall whilst holding the off button.
- When the machine beeps and starts running let go of the off button
- The machine will run a recalibration mode that lasts about 3 minutes. (60 seconds at each speed setting)
- If at any point you hear a continuous beep, then you need to restart the calibration process.
- Turn off the socket at the wall and back on again and turn the machine on.
- Please run the machine as normal.



We also recommend you follow this process every time to change the filters.

If you experience any problems following this guide please call our technical team on **03332 406406**