
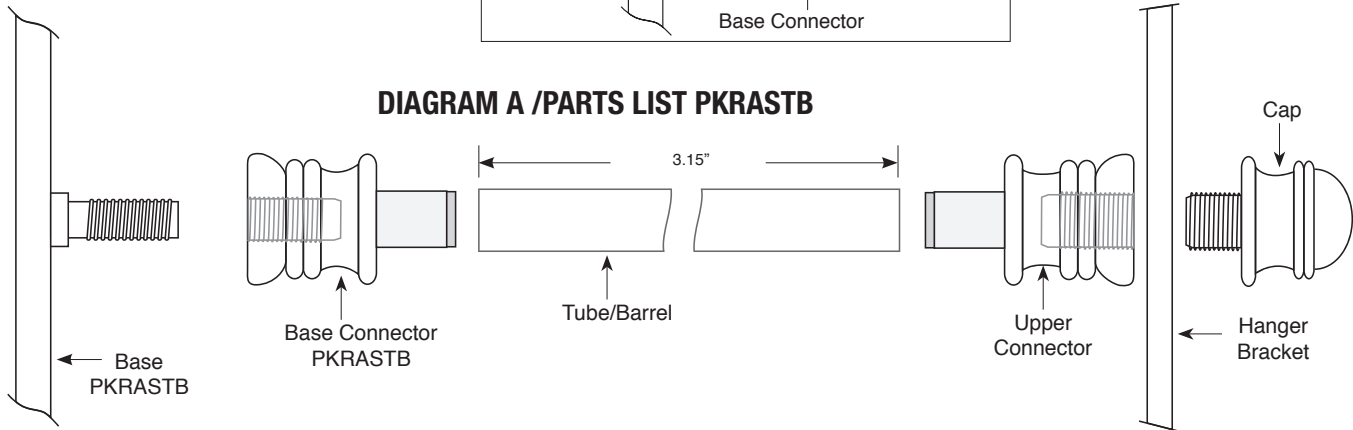
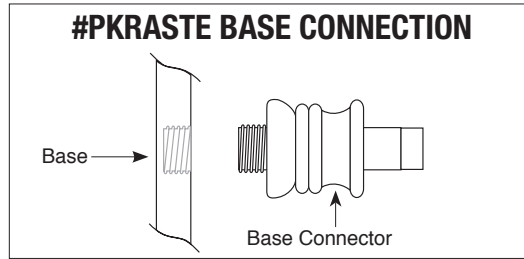


# Shaving Project Stand

## #PKRASTB, #PKRASTE

### Required Accessories


- 7mm Pen Mandrel
- 7mm drill bit
- 2 pc. bushings set #PKRASTBU
- 2-part epoxy glue or insta-cure (cyanoacrylate) glue

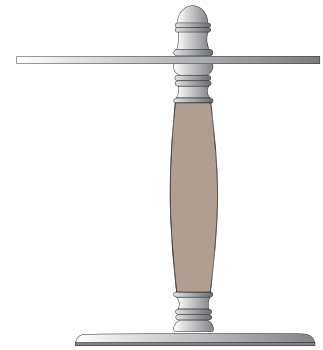

### Preparing the blank

- Cut a blank of 3/4" square to the length of the brass tube. Add 1/16" for squaring off.
- Drill a 7mm hole through the blank.
- Spread glue over the tube, insert into the blank with a twisting motion to spread the glue evenly inside.
- When the glue dries, use a 7mm barrel trimmer to square the ends of the blank. Take the wood flush with the brass tube.

### DIAGRAM B / TURNING THE BLANK

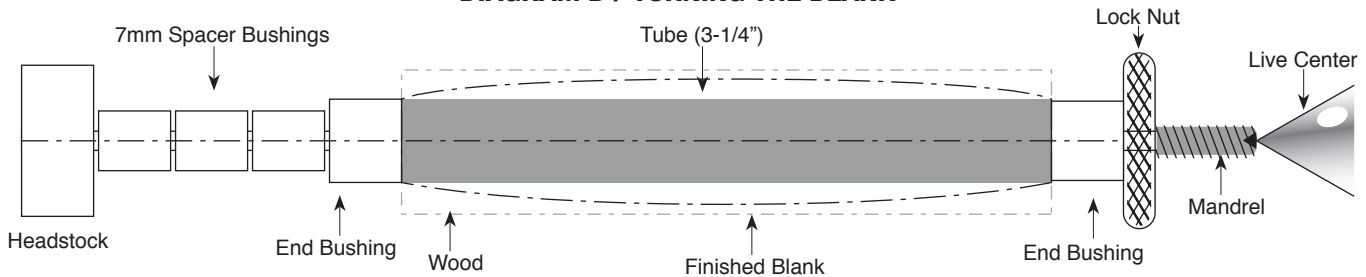

### Turning The Blank

- Mount the bushings and blank onto the mandrel according to the diagram.
- Turn the wood down to the bushings.
- Finish the wood with water proof sealer like "I Can't Believe this Finish" PKCAFINSET.

### Assembly *Note: Layout Finished parts according to diagram 'A'*

- Press the base connector into either end of the barrel.
- Press the upper connector into the opposite end of the barrel.
- Connect other parts of the stand according to dia. "A".
- The stand is ready for the brush and shaver handle.

### DIAGRAM C / BUSHINGS #PKRASTBU

