

Shaving Project Razor Handle

#PKRAHANXX


Applies to: Standard, Majestic & Magnum Styles

Required Accessories

- 7mm Pen Mandrel
- 7mm drill bit #PK-7MM
- 2 pc. bushings set (see below)
- 7mm barrel trimmer #PK-TRIM7
- 2-part epoxy glue or insta-cure (cyanoacrylate) glue




DIAGRAM A / PARTS LIST

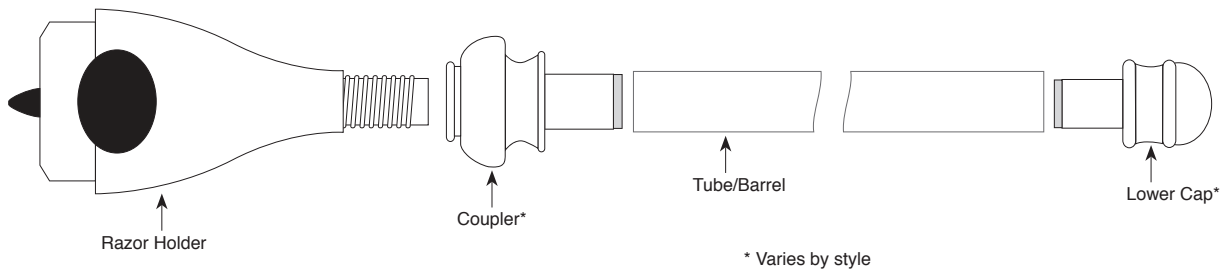

Preparing the Blank

- Cut a blank of 5/8" square to the length of the brass tube. Add 1/16" for squaring off.
- Drill a 7mm hole through the blank.
- Spread glue over the tube, insert into the blank with a twisting motion to spread the glue evenly inside.
- When the glue dries, use a 7mm barrel trimmer to square the ends of the blank. Take the wood flush with the brass tube.

DIAGRAM B / TURNING THE BLANK

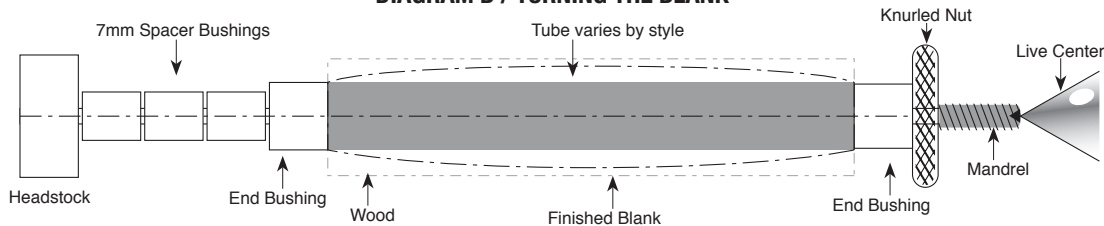

Turning The Blank

- Mount the bushings and blank onto the mandrel according to diagram B.
- For Magnum & Majestic styles you need to mount the bushings with the wide ends against the blank.
- Turn and the wood down to the bushings.
- Finish the wood with water proof sealer like "I Can't Believe this Fininsh" PKCAFINSET.

DIAGRAM C
Bushings for Standard
#PKRAHANBU

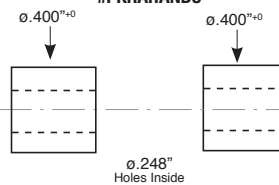


DIAGRAM D
Bushings for Majestic
#PKMAJSQBU


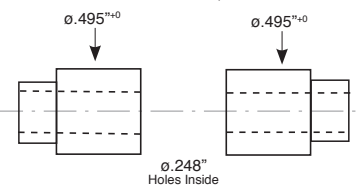


DIAGRAM E
Bushings for Magnum
#PKCP7000BU

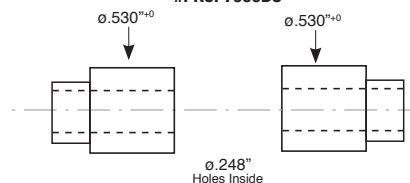

Assembly *Note: Layout Finished parts according to diagram 'A'*

- Press the coupler into either end of the turned barrel.
- Press the lower cap into the opposite end of the barrel.
- Screw the razor holder into the coupler, tight.
- Affix the Mach 3 Razor Blade by advancing the black bottom forward

For Majestic Style: to fit on hanging stands it is necessary to use narrow bushing #PKRAHANBU for the upper end