

# PROJECT PEN KITS



For more info and videos scan here

AXMINSTER

woodturning

## Gold Plated Secret Compartment Kit

Code: 700260



## WHAT'S REQUIRED

Bushing Set:  
**310387**

Drill Bit Size:  
**10 mm**

Minimum Blank Size:  
**19 mm x 19 mm**

## PREPARING THE BLANKS, HINTS & TIPS

Preparing a wooden or acrylic/polyester blank for a pen mandrel.

1. Cut a blank to the length of the tube plus approximately 2.5mm to allow for trimming and squaring off the ends.
2. Mark the centre on the end of the blank.
3. Using the recommended drill bit, drill a hole lengthwise through the blank.
4. Apply epoxy glue, Polyurethane glue or gap filling cyanoacrylate (super glue) to the tubes.

Insert the tube into the blank with a twisting motion to spread the glue evenly inside the hole.

5. Centre the tube lengthwise inside the blank.
6. Allow the adhesive to cure.
7. When cured, square the ends of the blank. Using a barrel trimmer with a guide matching the inner diameter of the tube or a universal pen blank squaring jig with a disc sander.
8. Take the excess material down flush with the ends of the brass tube. (do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly).

### Tips/Hints

- Excessive pressure may cause the drill bit to wander and/or split the blank. Slow the feed rate and back the drill bit out repeatedly for chip removal.
- Roughen the brass tube slightly with abrasive for better adhesion.
- Certain acrylic blanks are more transparent than others, especially lighter colours or blanks with light coloured swirls. To avoid the risk of the brass tube showing through the pen blank, paint the tubes white or black before gluing them in.
- The barrel trimmer guide also cleans any adhesive that may have gotten inside of the tube.

## TURNING THE BLANK, HINTS & TIPS

1. Mount the bushings and blank onto a pen mandrel according to the diagram.
2. Secure the bushings and blank onto the mandrel.
3. Slide the tailstock with a live centre into place against the mandrel and lock in position. This is for support; only slight pressure is required.
4. Using sharp tools, turn the blank down to become the Keyring Barrel with the profile of your choice.
5. Using successively finer abrasives gradually sand and polish the the Keyring Barrel.
6. Finish the the Keyring Barrel with your preferred choice of polish.

### Tips/Hints

- Don't be afraid to sharpen frequently especially when turning acrylics.



Continues over...

## ASSEMBLY, HINTS & TIPS

Layout parts according to diagram A

1. Press the End Cap into the bottom of the Keyring Barrel.
2. Press the Threaded Coupler, recessed end in first, into the top of the Keyring Barrel.
3. Slide the 'O-Ring' into the groove in the Threaded Coupler.

4. Thread on the Ring Cap into the Threaded Coupler.


5. Affix Keyring into the hole in the Ring Cap.

**Note:** When inserting currency into the tube, fold the currency rather than rolling the note for ease of removal.

### Tips/Hints

- Use a woodworking vice, one handed bar clamp, arbor press or a dedicated pen press.
- Press parts together slowly and steadily
- When pressing the parts together, CHECK the parts are correctly aligned with each other and straight. If the part is crooked or misaligned, it will result in a poor fit.

## DIAGRAM A

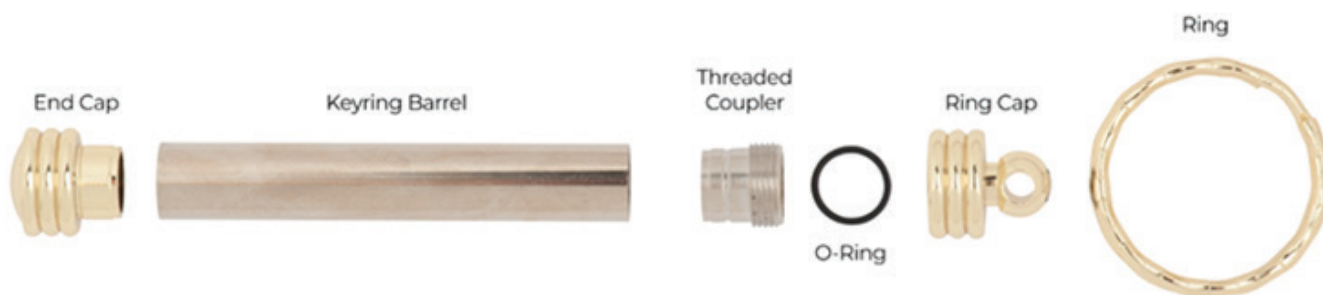

Visit the Knowledge blog 'How To Make A Pen' for hints, tips and videos  
[knowledge.axminstertools.com/pen-turning](https://knowledge.axminstertools.com/pen-turning)



VIEW OUR FULL RANGE OF  
PEN CASES AND DISPLAY BOXES ONLINE

Axminster Tools, Axminster, Devon, EX13 5PH

[AXMINSTERTOOLS.COM](https://www.axminstertools.com)