

AXMINSTER

PROfessional

Code 107614

Original Instructions

AP1550BN

Brad Nailer 16G 20-50mm



AT: 02/09/2022
BOOK VERSION: 2

CONTENTS

SUMMARY -----	1
SPECIFICATIONS -----	1
SAFETY WARNINGS & CAUTIONS -----	1
UNPACKING -----	2
SETTING -----	2
CONNECTING THE TOOL TO AN AIR SUPPLY -----	3
LOADING THE FASTENERS -----	3
OPERATING THE TOOL -----	3
REGULAR MAINTENANCE -----	3
TROUBLE SHOOTING -----	4
EXPLODED VIEW DRAWING -----	5
PARTS LIST -----	6

Cert No: F50F

Axminster Tool Centre Ltd
Axminster Devon
EX13 5PH UK
axminstertools.com

declares that the machinery described:-

Type	Brad Nailer
Model	AP1550BN

Signed



Andrew Parkhouse
Operations Director

Date: 30/03/2010

EU Declaration of Conformity

This machine complies with the following directives:

2006/42EC
2024-10-70-10-PB001



and conforms to the machinery example for which the
EC Type-Examination Certificate No 105806C
has been issued by **ChongQing Hybest Tools Group Co., Ltd.**
at: No. 157, Jienan Street, Banan District Chongqing, China

and complies with the relevant essential health and safety requirements.

READ ALL INSTRUCTIONS BEFORE OPERATING THE TOOL

SUMMARY

You will need the instruction for the safety warning and precautions, assembly instruction, operating and maintains procedures, parts list and diagram. Keep your invoice with this instruction. Write the invoice number on the inside of the front cover. Keep the instruction and invoice in a safe and dry place for future reference.

SPECIFICATIONS

Characteristic	Value
Minimum Operating Air Pressure	60 PSI
Maximum Operating Air Pressure	100 PSI
Nail Length Range	3/4" -- 2"
Nail Size	18 Gauge
Nail Capacity	100
Air Inlet	1/4" NPT
Air Consumption	1.8 CFM
Tool Weight	3.1 lbs

SAFETY WARNINGS& CAUTIONS

- 1. KEEP WORKING AREA CLEAN.** Cluttered areas invite injuries.
- 2. DON'T ALLOW CHILDREN KEEP AT THE WORKING AREA.** Don't let them handle the tool.
- 3. DO NOT OPERATE THIS TOOL IF UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.** Read warning label on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not attempt to operate.
- 4. USE SAFETY GLASSES.** Safety glasses should conform to ANSI Z87.1 specifications. Before operating, wear safety glasses against flying debris from the front and side. Safety glasses should be worn when loading, operating, unloading or servicing this tool.
- 5. USE EAR PROTECTION.** The working area may be exposed to high noise levels that can lead to hearing damaged.
- 6. NEVER USE OXYGEN COMBUSTIBLE GASES, BOTTLED GASES OR HIGH PRESSURE COMPRESSED GAS AS A POWER SOURCE FOR THIS TOOL.** The tool may explode and cause serious injury.
- 7. DRESS SAFELY.** Protective gloves and nonskid footwear or safety shoes are recommended when working with and operating this tool. Don't wear loose clothing or jewelry. They can get caught in moving parts. Also, wear a protective hair covering to prevent long hair from getting caught in the tool.
- 8. DO NOT FIRE TO HARD MATERIALS.** Do not attempt to shoot toward hard or brittle material such as concrete, steel or tile.
- 9. WHEN OPERATING TOOL.** keep the proper footing and balance to avoid damaged resulting from losing balance.
- 10. CHECK DAMAGED PARTS.** Before using tool, carefully check if there is any part damaged.
- 11. REPLACE PARTS AND ACCESSORIES.** Only allow use same replacement parts while servicing. Approved accessories and replacement parts are available.
- 12. KEEP ALERT.** Watch what you are doing. Use common sense. Do not operate any tool when you are tired.

13. **STORE THE TOOL.** When not in use, tool should be cleaned, fully assembled and then, stored in a dry location to reduce rust. For safety, keep out of reach of children.
14. **OUTDOORS EXTENSION CORDS.** When air compressor is used outdoors, use only rounded jackets extensions cords intended for outside use. See manufacturer's manual for the AWG required for the compressor's amperage draw.
15. **PAY ATTENTION TO AIR HOSE AND THEIR CONNEATIONS.** Don't trip over hoses. Make sure all connections are tight.
16. **AFTER LOADING THE FASTENERS.** Never point the tool at yourself or bystanders.
17. **USE THE CORRECT AIR CONNECTOR.** The connector on the tool must not hold pressure when the air supply is disconnected. If the wrong fitting is used, the tool can be charged with air after being disconnected and still be able to drive a fastener.
18. **WHEN CONNECTING THE AIR.** The tool can possibly fire the fasteners. Therefore, remove all the fasteners before connecting to the air.
19. **DO NOT DEPRESS THE SAFE BRACKET AND THE TRIGGER WHEN LOADING.**
20. **IF THE FASTENERS ARE JAMMED.** Disconnect the tool from the air and remove the jammed fasteners out.

WARNING: The warning, caution, and instructions explained in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that COMMON SENSE AND CAUTION ARE FACTORS WHICH CANNOT BE BUILT INTO THIS PRODUCT, BUT MUST BE SUPPLIED BY THE OPERATOR.

UNPACKING

When unpacking, check and make sure that all the accessories are included. If anyone is missed or broken, please call seller for help. Refer to the follow lists.

Description	Qty
Nailer	1
S3 Hex Key	1
S4 Hex Key	1
Air Tool Oil	1
Operating instruction	1

SETTING

Your air tool is fully assembly when you receive it. Before using it, attach the air line and desired air system accessories. See Figure 1 for the recommended accessories and connection order. Be sure the air hose is depressurized when installing or removing adapters to the air line.

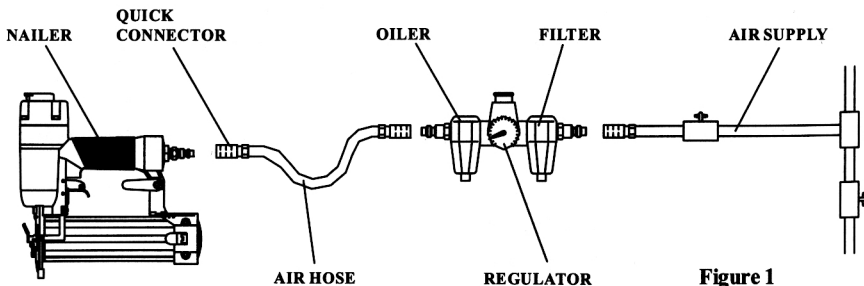


Figure 1

CONNECTING THE TOOL TO AN AIR SUPPLY

1. Determine if the tool needs oil and, if necessary, place two drops of oil in the AIR PLUG(77) as shown in Figure 2. If you are using an automatic in-line oiler, check and add oil if necessary.
2. Turn the compressor on and set the regulator to the proper pressure for the size and type of fastener being used.
3. Connect the tool to the air supply (see Setup for air supply connection recommendations).

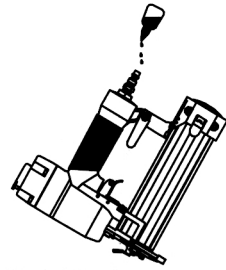


Figure 2

LOADING THE FASTENERS

1. Depress the LOCK(61) to release the MOVABLE MAGAZINE (54) and pull the magazine out fully as shown in Figure 3.
2. Place a full clip of the specified type and size fasteners on the FIXED MAGAZINE (67), up to 100 fasteners may be loaded in the magazine.
3. Push the MOVABLE MAGAZINE ASSEMBLY forward until it was locked.

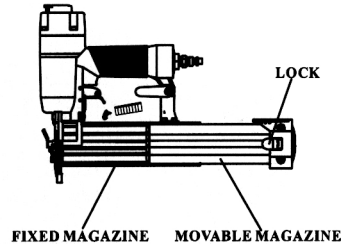


Figure 3

OPERATING THE TOOL

Test the driving depth in a sample piece of wood before using. If the fasteners are being driven too far or not far enough, adjust the regulator to provide less air pressure or more air pressure.

1. Connect the tool to the air supply. Make sure the air pressure is in correct range denoted in section of SPECIFICATIONS.
2. Load fastener above as the direction given in the section called LOAD THE FASTENER.
3. Place tool nose on working surface, slightly push the tool against working surface until safety bracket is depressed. Then squeeze trigger once to fastener. Tool can achieve continuous firing by continuously squeezing trigger with safety bracket keeping depressed against work surface.
4. Lift the tool off the work surface.

REGULAR MAINTENANCE


1. Frequent, but not excessive, lubrication is required for best performance. Oil added through the airline connection will lubricate internal parts. An automatic airline oiler is recommended but oil may be added manually before every operation or after about 1 hour of continuous use. Only a few drops of oil at a time are necessary. Too much oil will collect inside the tool and be blown out during the exhaust cycle. **ONLY USE PNEUMATIC TOOL OIL.** Do not use detergent oil or additives, as these lubricants will cause accelerated wear to the seal in the tool.
2. Use a small amount of oil on all moving surface and pivots.
3. Dirt and water in the air supply are major causes of pneumatic tool wear. Use a filter/oiler for better performance and longer life. The filter must have adequate flow capacity for the specific application. Consult the manufacturer's instructions for proper maintenance of you filter.
4. Keep tools clean for better and safer performance. Use nonflammable cleaning solutions (**CAUTION:** Such solutions may damaged O-ring and other tool parts) only if necessary- **DO NOT SOAK.**

TROUBLE SHOOTING

STOP USING THE TOOL IMMEDIATELY IF ANY OF THE FOLLOWING PROBLEMS OCCUR. SERIOUS PERSONAL INJURY COULD OCCUR. ANY REPAIRS OR REPLACEMENTS MUST BE DONE BY A QUALIFIED PERSON OR AN AUTHORIZED SERVICE CENTER ONLY.

PROBLEM	PROBLEM CAUSE	SOLUTION
Air leaking at Trigger area	<ol style="list-style-type: none"> 1. O-ring in trigger valve are damaged. 2. Trigger valve head are damaged. 3. Trigger valve stem, seal or O-ring are damaged. 	<ol style="list-style-type: none"> 1. Check and replace O-ring. 2. Check and replace trigger valve head. 3. Check and replace trigger valve stem, seal or O-ring.
Air leaking between body and front plate	Damaged piston O-ring or bumper.	Check and replace O-ring or bumper.
Air leaking between body and cylinder cap	<ol style="list-style-type: none"> 1. Screw loose. 2. Damaged seal. 	<ol style="list-style-type: none"> 1. Tighten screws. 2. Check and replace seal.
Blade driving fastener too deeply	<ol style="list-style-type: none"> 1. Worn bumper 2. Air pressure is too higher. 	<ol style="list-style-type: none"> 1. Replace bumper. 2. Adjust the air pressure.
Runs slowly or has power loss	<ol style="list-style-type: none"> 1. Insufficient oil. 2. Insufficient air supply. 3. Broken spring in cylinder cap. 4. Exhaust port in cylinder cap is blocked. 	<ol style="list-style-type: none"> 1. Lubricate as instructed. 2. Check air supply. 3. Replace spring. 4. Replace damaged internal parts.
Tool skip a fasteners	<ol style="list-style-type: none"> 1. Worn bumper or damaged spring (53). 2. Dirt in front plate. 3. Inadequate airflow to tool. 4. Worn or dry O-ring on piston. 5. Damaged O-ring on trigger valve. 6. Cylinder cap seal leaking. 	<ol style="list-style-type: none"> 1. Replace bumper or pusher spring. 2. Clean drive channel of front plate. 3. Check hose and compressor fittings. 4. Replace O-ring or lubricate. 5. Replace O-ring. 6. Replace seal.
Fasteners are jammed	<ol style="list-style-type: none"> 1. Joint guider is worn. 2. Fasteners are wrong size or damaged. 3. Magazine or front plate screws are loose. 4. Blade in piston assembly is damaged. 	<ol style="list-style-type: none"> 1. Replace joint guider. 2. Use the recommended and undamaged fasteners 3. Tighten screws. 4. Replace piston assembly.
Tool will not drive down tight	<ol style="list-style-type: none"> 1. Worn blade in piston assembly. 2. Lack of power. 3. Slow cycling and loss of power. 	<ol style="list-style-type: none"> 1. Replace piston assembly. 2. Adjust to adequate air pressure. 3. Check cylinder cap spring for broken coils or reduced length. Check if exhaust port of cylinder cap is restricted.

EXPLODED VIEW DRAWING

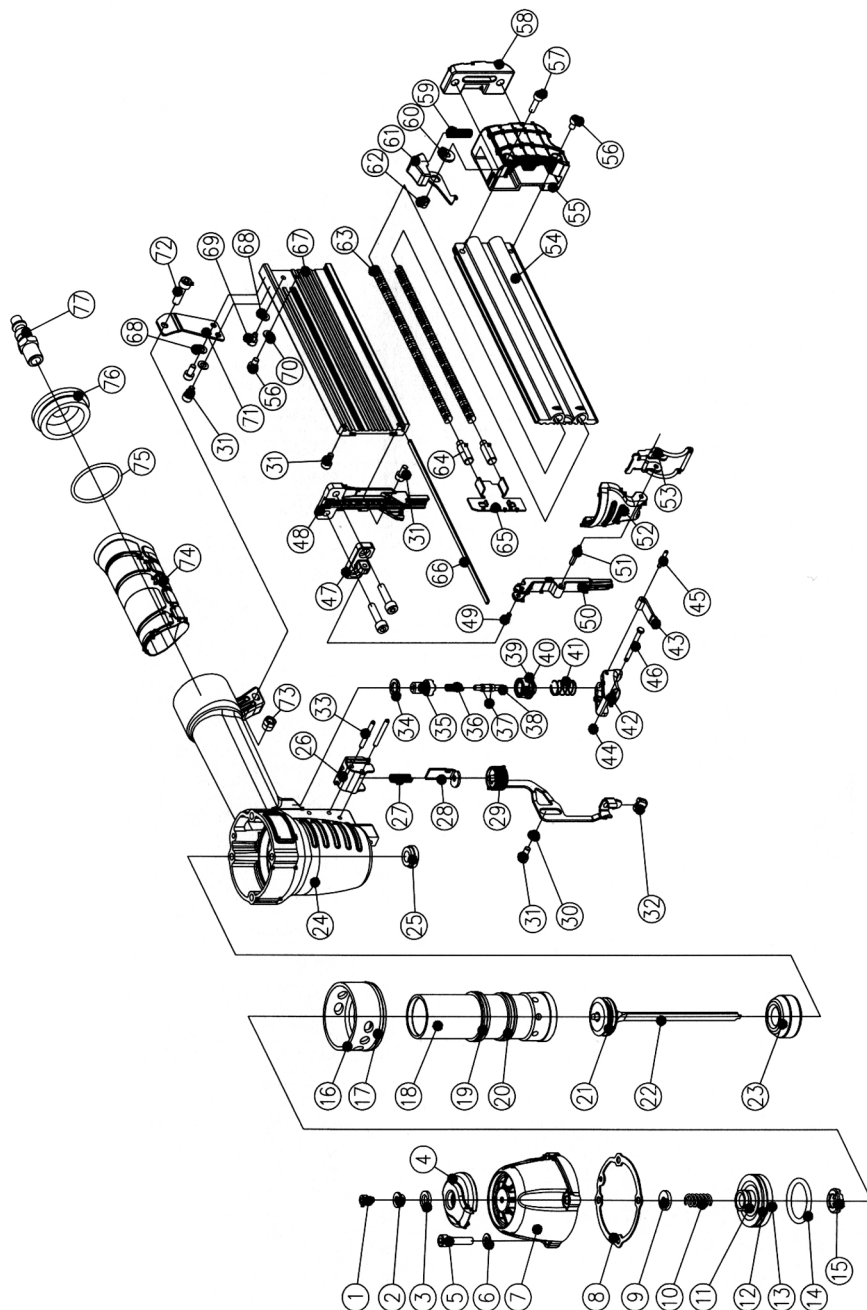

PARTS LIST

Refer to the Exploded View Drawing for the location of parts listed below

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	SCREW	40	TRIGGER VALVE GUIDE
2	BUSHING	41	SPRING
3	WASHER	42	TRIGGER
4	EXHAUST COVER	43	TRIGGER SPRING
5	SCREW	44	WASHER
6	WASHER	45	SPRING PIN
7	CYLINDER CAP	46	PIN
8	GASKET	47	SPACER
9	VALVE SEAL	48	DRIVE GUIDE
10	SPRING	49	SPRING PIN
11	O-RING	50	FRONT PLATE
12	O-RING	51	SPRING PIN
13	VALVE	52	COVER
14	O-RING	53	LATCH ASSEMBLY
15	STOPPED WASHER	54	MOVABLE MAGAZINE
16	BUMPER	55	STOPPED PLATE
17	O-RING	56	SCREW
18	CYLINDER	57	SCREW
19	O-RING	58	JOINT GUIDE
20	O-RING	59	SPRING
21	O-RING	60	BUSHING
22	PISTON ASSEMBLY	61	LOCK
23	BUMPER	62	NUT
24	BODY	63	SPRING
25	JOINT GUIDE	64	FEEDER SEAT
26	SAFE GUIDE	65	FEEDER SHOE
27	SPRING	66	RAIL
28	SAFE BRACKET A	67	FIXED MAGAZINE
29	SAFE BRACKET B	68	WASHER
30	BUSHING	69	SCREW
31	SCREW	70	WASHER
32	RUBBER COVER	71	SUPPORT
33	SPRING PIN	72	SCREW
34	SEAL	73	NUT
35	TRIGGER VALVE HEAD	74	SOFT GRIP SLEEVE
36	SPRING	75	O-RING
37	O-RING	76	END CAP
38	TRIGGER VALVE STEM	77	AIR PLUG
39	O-RING		