

AXMINSTER

PROfessional

Code 107619

Original Instructions

AP0622WS


Wide Crown Stapler 6-22mm



AT: 09/02/2022
BOOK VERSION: 1

CONTENTS

SUMMARY	-----	1
SPECIFICATIONS	-----	1
SAFETY WARNINGS & CAUTIONS	-----	1
UNPACKING	-----	2
SETTING	-----	2
CONNECTING THE TOOL TO AN AIR SUPPLY	-----	3
LOADING THE FASTENERS	-----	3
OPERATING THE TOOL	-----	3
REGULAR MAINTENANCE	-----	3
TROUBLE SHOOTING	-----	4
EXPLODED VIEW DRAWING	-----	5
PARTS LIST	-----	6

<p>Cert No: 1022J</p> <p>Axminster Tool Centre Ltd Axminster Devon EX13 5PH UK axminstertools.com</p> <p>declares that the machinery described:-</p> <table border="1"><tr><td>Type</td><td>Wide Crown Stapler</td></tr><tr><td>Model</td><td>AP0622WS</td></tr></table> <p>Signed </p> <p>Andrew Parkhouse Operations Director</p>	Type	Wide Crown Stapler	Model	AP0622WS	<p>EU Declaration of Conformity</p> <p>This machine complies with the following directives:</p> <p>2006/42EC 2019-10-70-10-PB01</p> <p>and conforms to the machinery example for which the EC Type-Examination Certificate No 106206C has been issued by ChongQing Hybest Tools Group Co., Ltd. at: No. 157, Jienan Street, Banan District Chongqing, China</p> <p>and complies with the relevant essential health and safety requirements.</p> <p>CE UK CA</p>
Type	Wide Crown Stapler				
Model	AP0622WS				
<p>Date: 29/10/2010</p>					

READ ALL INSTRUCTIONS BEFORE OPERATING THE TOOL

SUMMARY

You will need the instruction for the safety warning and cautions, assembly instruction, operating and maintaining procedures, exploded view drawing and parts list. Keep your invoice with this instruction. Keep the instruction and invoice in a safe and dry place for future reference.

SPECIFICATIONS

Characteristic	Value
Minimum Operating Air Pressure	60 PSI
Maximum Operating Air Pressure	100 PSI
Staple Length Range	3/8" -- 7/8"
Staple Size	20 Gauge
Staple Capacity	100
Air Inlet	1/4" NPT
Air Consumption	1.8 CFM
Tool Weight	2.4 lbs

SAFETY WARNINGS & CAUTIONS

- 1. KEEP WORKING AREA CLEAN.** Cluttered areas invite injuries.
- 2. DON'T ALLOW CHILDREN KEEP AT THE WORKING AREA.** Don't let them handle the tool.
- 3. DO NOT OPERATE THIS TOOL IF UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.** Read warning label on prescriptions to determine if your judgment or reflexes are impaired while taking drugs. If there is any doubt, do not attempt to operate.
- 4. USE SAFETY GLASSES.** Safety glasses should conform to ANSI Z87.1 specifications. Before operating, wear safety glasses against flying debris from the front and side. Safety glasses should be worn when loading, operating, unloading or servicing this tool.
- 5. USE EAR PROTECTION.** The working area may be exposed to high noise levels that can lead to hearing damaged.
- 6. NEVER USE OXYGEN COMBUSTIBLE GASES, BOTTLED GASES OR HIGH PRESSURE COMPRESSED GAS AS A POWER SOURCE FOR THIS TOOL.** The tool may explode and cause serious injury.
- 7. DRESS SAFELY.** Protective gloves and nonskid footwear or safety shoes are recommended when working with and operating this tool. Don't wear loose clothing or jewelry. They can get caught in moving parts. Also, wear a protective hair covering to prevent long hair from getting caught in the tool.
- 8. DO NOT FIRE TO HARD MATERIALS.** Do not attempt to shoot toward hard or brittle material such as concrete, steel or tile.
- 9. WHEN OPERATING TOOL.** keep the proper footing and balance to avoid damaged resulting from losing balance.
- 10. CHECK DAMAGED PARTS.** Before using tool, carefully check if there is any part damaged.
- 11. REPLACE PARTS AND ACCESSORIES.** Only allow use same replacement parts while servicing. Approved accessories and replacement parts are available.
- 12. KEEP ALERT.** Watch what you are doing. Use common sense. Do not operate any tool when you are tired.
- 13. STORE THE TOOL.** When not in use, tool should be cleaned, fully assembled and then, stored in a dry location to reduce rust. For safety, keep out of reach of children.

14. **OUTDOORS EXTENSION CORDS.** When air compressor is used outdoors, use only rounded jackets extensions cords intended for outside use. See manufacturer's manual for the AWG required for the compressor's amperage draw.
15. **PAY ATTENTION TO AIR HOSE AND THEIR CONNEATIONS.** Don't trip over hoses. Make sure all connections are tight.
16. **AFTER LOADING THE FASTENERS.** never point the tool at yourself or bystanders.
17. **USE THE CORRECT AIR CONNECTOR.** The connector on the tool must not hold pressure when the air supply is disconnected. If the wrong fitting is used, the tool can be charged with air after being disconnected and still be able to drive a fastener.
18. **WHEN CONNECTING THE AIR.** The tool can possibly fire the fasteners. Therefore, remove all the fasteners before connecting to the air.
19. **DO NOT DEPRESS THE TRIGGER WHEN LOADING.**
20. **IF THE FASTENERS ARE JAMMED.** Disconnect the tool from the air and remove the jammed fasteners out.

WARNING: The warning, caution, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that **COMMON SENSE AND CAUTION ARE FACTORS WHICH CANNOT BE BUILT INTO THIS PRODUCT, BUT MUST BE SUPPLIED BY THE OPERATOR.**

UNPACKING

When unpacking, please refer to following table and check all the parts are complete. If any parts are missing or broken, please call seller for help.

Description	Q'ty
Stapler	1
S4 Hex Key	1
Air Tool Oil	1
Operating instruction	1

SETTING

Your air tool is fully assembly when you receive it. Before using it, attach the air line and desired air system accessories. See Figure 1 for the recommended accessories and connection order. Be sure the air hose is depressurized when installing or removing adapters to the air line.

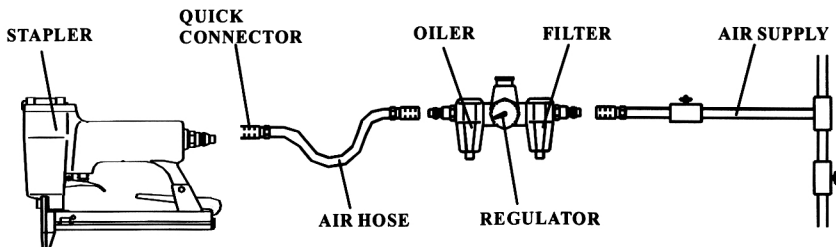


Figure 1

CONNECTING THE TOOL TO AN AIR SUPPLY

1. Determine if the tool needs oil and, if necessary, place two drops of oil in the AIR PLUG(47) as shown in Figure 2. If you are using an automatic in-line oiler, check and add oil if necessary.
2. Turn the compressor on and set the regulator to the proper pressure according to the size and type of fastener being used.
3. Connect the tool to the air supply (see setting for air supply connection recommendations).

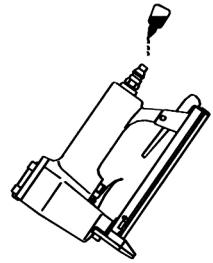


Figure 2

LOADING THE FASTENERS

1. Depress the LOCK (43) to release the MOVABLE MAGAZINE (37) and pull the magazine out fully as shown in Figure 3.
2. Place a full clip of the specified type and size fasteners on the FIXED MAGAZINE (33), 100 fasteners may be loaded in the magazine.
3. Push the MOVABLE MAGAZINE ASSEMBLY forward until it was locked.

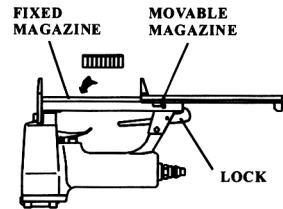


Figure 3

OPERATING THE TOOL

Test the driving depth in a sample piece of wood before using. If the fasteners are being driven too far or not far enough, adjust the regulator to provide less air pressure or more air pressure.

1. Load fastener as following the direction given in the section called **LOADING THE FASTENER**.
2. Connect the tool to the air supply. Make sure the air pressure is in correct range denoting in the section **SPECIFICATIONS**.
3. Hold the Body (17), press the Drive guide (30) to work surface, being sure that the tool is straight and then, gently depress the Trigger (26) to drive the fastener.
4. Lift the tool off the working surface.

REGULAR MAINTENANCE


1. Frequent, but not excessive, lubrication is required for best performance. Oil added through the airline connection will lubricate internal parts. An automatic airline oilier is recommended but oil may be added manually before every operation or after about 1 hour of continuous use. Only a few drops of oil at a time are necessary. Too much oil will collect inside the tool and be blown out during the exhaust cycle. **ONLY USE PNEUMATIC TOOL OIL**. Do not use detergent oil or additives, as these lubricants will cause accelerated wear to the seal in the tool.
2. Use a small amount of oil on all moving surface and pivots.
3. Dirt and water in the air supply are major causes of pneumatic tool wear. Use a filter/oiler for better performance and longer life. The filter must have adequate flow capacity for the specific application. Consult the manufacturer's instructions for proper maintenance of you filter.
4. Keep tools clean for better and safer performance. Use nonflammable cleaning solutions (**CAUTION:** Such solutions may damaged O-ring and other tool parts) only if necessary- **DO NOT SOAK**.

TROUBLE SHOOTING

STOP USING THE TOOL IMMEDIATELY IF ANY OF THE FOLLOWING PROBLEMS OCCUR. SERIOUS PERSONAL INJURY COULD OCCUR. ANY REPAIRS OR REPLACEMENTS MUST BE DONE BY A QUALIFIED PERSON OR AN AUTHORIZED SERVICE CENTER ONLY.

PROBLEM	CAUSE	SOLUTION
Air leaking at Trigger area	<ol style="list-style-type: none"> 1. O-ring in trigger valve are damaged. 2. Trigger valve head are damaged. 3. Trigger valve stem, seal or O-ring are damaged. 	<ol style="list-style-type: none"> 1. Check and replace O-ring. 2. Check and replace trigger valve head. 3. Check and replace trigger valve stem, seal or O-ring.
Air leaking between body and front plate	Damaged piston O-ring or bumper.	Check and replace O-ring or bumper.
Air leaking between body and cylinder cap	<ol style="list-style-type: none"> 1. Screw loose. 2. Damaged seal. 	<ol style="list-style-type: none"> 1. Tighten screws. 2. Check and replace seal.
Blade driving fastener too deeply	<ol style="list-style-type: none"> 1. Worn bumper 2. Air pressure is too higher. 	<ol style="list-style-type: none"> 1. Replace bumper. 2. Adjust the air pressure.
Runs slowly or has power loss	<ol style="list-style-type: none"> 1. Insufficient oil. 2. Insufficient air supply. 3. Broken spring in cylinder cap. 4. Exhaust port in cylinder cap is blocked. 	<ol style="list-style-type: none"> 1. Lubricate as instructed. 2. Check air supply. 3. Replace spring. 4. Replace damaged internal parts.
Tool skip a fasteners	<ol style="list-style-type: none"> 1. Worn bumper or damaged tension spring. 2. Dirt in drive guide. 3. Inadequate airflow to tool. 4. Worn or dry O-ring on piston. 5. Damaged O-ring on trigger valve. 6. Cylinder cap seal leaking. 	<ol style="list-style-type: none"> 1. Replace bumper or pusher spring. 2. Clean drive channel of drive guide. 3. Check hose and compressor fittings. 4. Replace O-ring or lubricate. 5. Replace O-ring. 6. Replace seal.
Fasteners are jammed	<ol style="list-style-type: none"> 1. Joint guider is worn. 2. Fasteners are wrong size or damaged. 3. Magazine or front plate screws are loose. 4. Blade in piston assembly is damaged. 	<ol style="list-style-type: none"> 1. Replace joint guider. 2. Use the recommended and undamaged fastenerls. 3. Tighten screws. 4. Replace piston assembly.
Tool will not drive down tight	<ol style="list-style-type: none"> 1. Blade in piston assembly slipping off fastener crown. 2. Lack of power. 3. Slow cycling and loss of power. 	<ol style="list-style-type: none"> 1. Replace piston assembly. 2. Adjust to adequate air pressure. 3. Check cylindre cap spring for broken coils or reduced length. Check if exhaust port of cylinder cap is restricted.

EXPLODED VIEW DRAWING

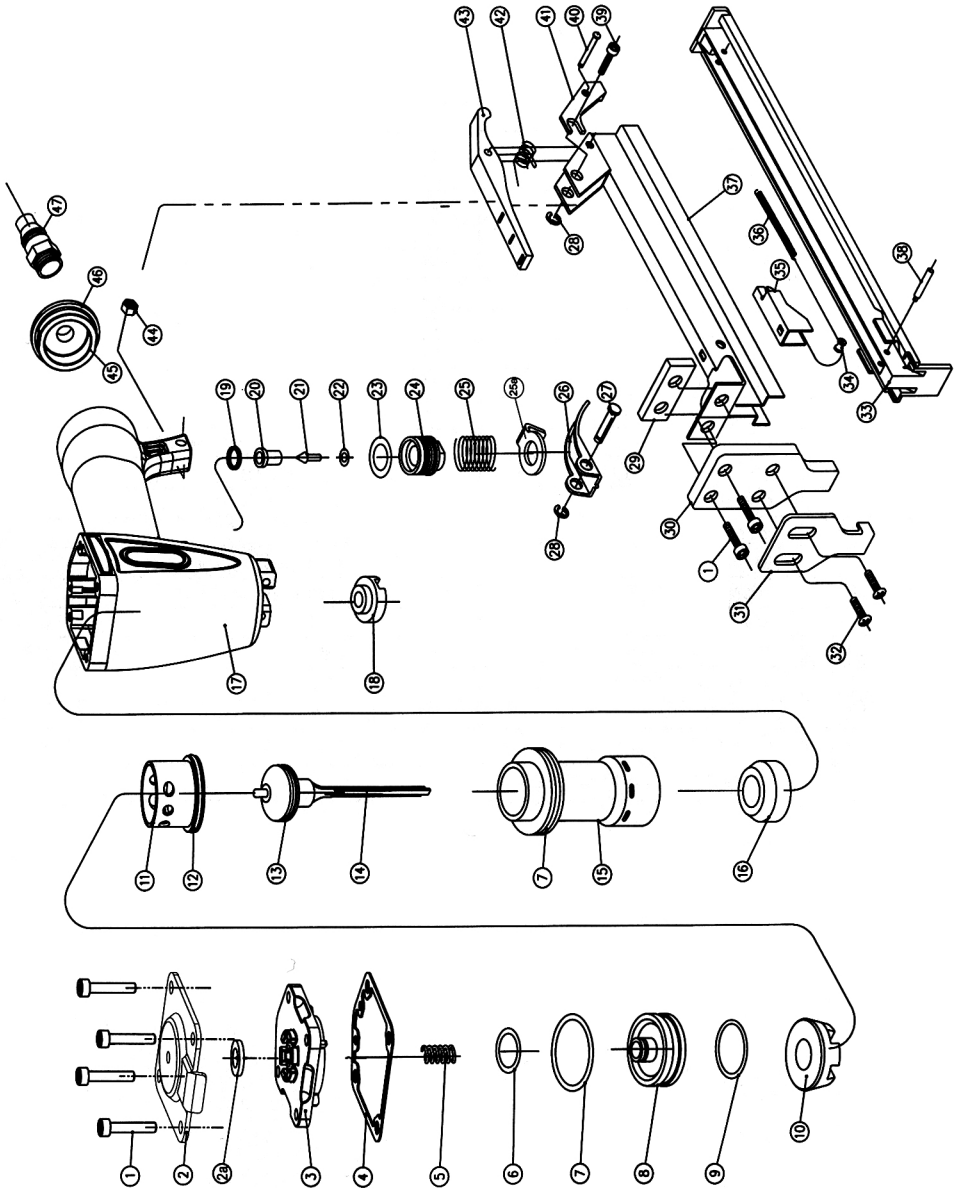

PARTS LIST

Refer to the Exploded View Drawing for the location of parts listed below

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	SCREW	25	SPRING
2	EXHAUST COVER	25a	SAFE BRACKET
2a	SEAL	26	TRIGGER
3	CYLINDER CAP	27	PIN
4	GASKET	28	LOCKING WASHER
5	SPRING	29	SPACER
6	O-RING 18.4×2.4	30	DRIVE GUIDER
7	O-RING 36.3×2.5	31	ADJUSTING PLATE
8	VALVE	32	SCREW
9	O-RING 31.5×3.5	33	MOVABLE MAGAZINE
10	STOPPED WASHER	34	WHEEL
11	COLLAR	35	FEEDER SHOE
12	O-RING 48.5*2.5	36	SPRING
13	O-RING 27.4×3	37	FIXED MAGAZINE
14	PISTON ASSEMBLY	38	SPRING PIN
15	CYLINDER	39	SCREW
16	BUMPER	40	PIN
17	BODY	41	STOPPED PIECE
18	JOINT GUIDER	42	TORSION SPRING
19	SEAL	43	LOCK
20	TRIGGER VALVE HEAD	44	NUT
21	TRIGGER VALVE STEM	45	END CAP
22	O-RING 6.5×1.4	46	O-RING 40.2*2.3
23	O-RING 15×1.9	47	AIR PLUG
24	TRIGGER VALVE GUIDER		